

Power Tank Instructions

Power Tank 4 Door Sports Bar Mount - BKT-2240-D & BKT-2240-P

Thank you for purchasing a Power Tank 4 Door Sports Bar Mount! This install requires only basic hand tools. Install should take about 15 minutes. Please read all instructions first, before beginning the install. These instructions apply to both the Driver and Passenger side mount and are identical for both sides. For the purposes of these instructions, we are mounting to the passenger side. This bracket fits 5 lb or 10 lb Power Tanks.

What's included:


- (H1) 6x 3/8" x 1/2" button head bolt
- (H2) 6x 3/8" flanged nut
- (H3) 2x M8 button head bolt
- (H4) 2x M8 Washer
- (H5) 2x White Spacer
- (P1) 1x Sports Bar Plate
- (P2) 1x Sheeley Brace (used for 10 lb Power Tanks only)

You will need:

- 9/16" wrench
- 7/32" allen wrench
- 5mm allen wrench
- T25 Torx wrench (used for 10 lb Power Tanks only)
- Medium strength Loctite or threadlocker (optional)
- Power Tank Super Bracket (sold separately)

Step 1: Bracket assembly

- A. Attach your Power Tank Super Bracket to the **P1** Sports Bar Plate using (6) **H1** 3/8" bolts and (6) **H2** 3/8" nuts starting with the two in the center using 7/32" allen wrench and 9/16" wrench.
- B. Install the **P2** Sheeley Brace to the back of the **P1** Sports Bar Plate in the position shown *if mounting a 10 lb Power Tank*.
- C. Mount the Super Bracket so the latch is on the same side as the PT decal on the **P1** Sports Bar Plate.
- D. Remove the lower rubber trim piece from the Super Bracket *if mounting a 10 lb Power Tank*.

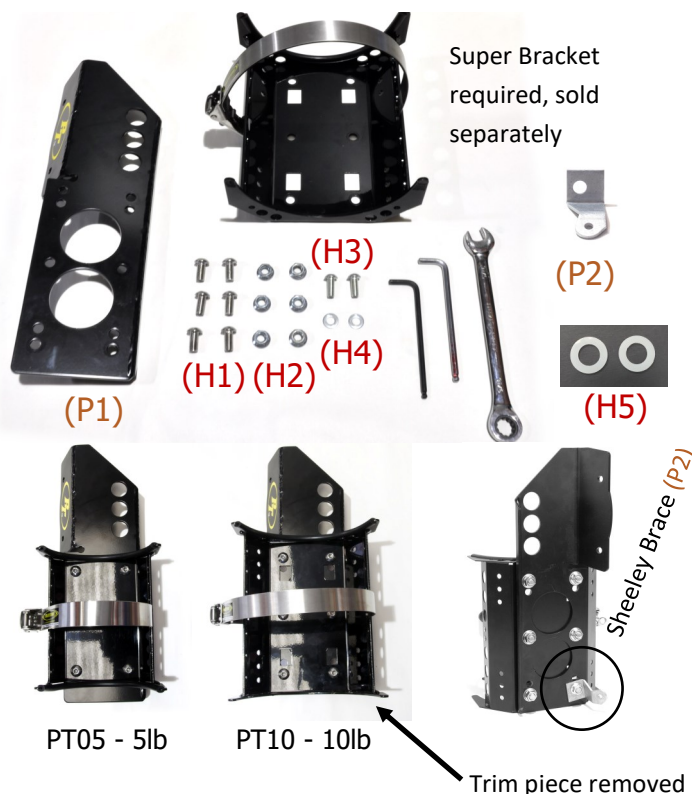

Step 2: Attaching to sports bar

- A. Remove the plastic trim piece (Fig 2A) from the Jeep Sports Bar on the desired mounting side. This reveals two threaded holes normally used to install the soft top. Remove foam if present.
- B. Remove the screw in the position indicated in Fig 2B using T25 Torx wrench.
- C. Attach the bracket assembly to the Jeep Sports Bar using the (2) **H3** M8 bolts and (2) **H4** M8 washers in the two threaded holes from step 2A using 5mm allen wrench. If using Loctite, apply to **H3** M8 bolts. Place the **H5** White Spacers between the bracket assembly and Jeep Sports Bar.
- D. Reinsert the screw removed in step 2B through the Sheeley Brace using T25 Torx wrench.



Step 3: Mounting Power Tank

- A. If you are mounting a 5 lb Power Tank, simply insert it into the Super Bracket and adjust the latch so it is snug but not too tight and then tighten the lock nut on the latch.
- B. If you are mounting a 10 lb Power Tank, insert it into the Super Bracket so the tank boot lip sits above the lower cradle of the Super Bracket which will help to support the weight. Adjust the latch so it is snug but not too tight and then tighten the lock nut on the latch.

